GLASS SHOWCASE DISPLAY CABINET WITH STORAGE

ITEM # DDKIT1B, DDKIT1W, DDKIT1SC

(2) PEOPLE NEEDED FOR ASSEMBLY




GLASS SHOWCASE

NOTE: SHIPPED UNASSEMBLED 3 CARTONS:

- 1. (5) GLASS PIECES
- 2. TOP FRAME WITH LIGHTING
- 3. BOTTOM FRAME
 (INCLUDES FRAME PIECES, POWER
 SUPPLY MOUNTING BRACKET)

FOR REPLACEMENT PARTS, PLEASE CONTACT: cs@displaydispensary.com

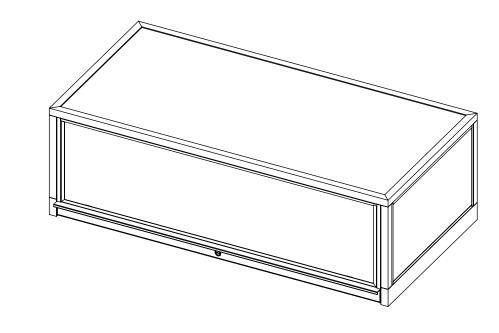




4X

1/4-20 X 0.875" L CSK SOCKET HEAD SCREWS



8X

 1/4-20 X 0.5" L
FLAT HEAD HEXAGON SOCKET SCREWS
(4) TO SECURE TO STORAGE CABINET
(4) TO SECURE POWER SUPPLY
MOUNTING BRACKET



2X

- (1) FOR LARGER SCREWS
- (1) FOR SMALLER SCREWS



2X

#8-32 X 0.315" L SOCKET BUTTON HEAD SCREWS



8X

1/4-20 X 0.625" L FLAT HEAD HEXAGON SOCKET SCREWS (4) TO SECURE REAR UPRIGHTS (4) TO SECURE FRONT FRAME

STORAGE CABINET

1 CARTON:

- **PULL HANDLES**
- **SCREWS**

FOR REPLACEMENT PARTS, PLEASE CONTACT: cs@displaydispensary.com

 
FRAME

1 CARTON:

- FRAME PIECES
- **HARDWARE**
- CABLE RACEWAY

FOR REPLACEMENT PARTS, PLEASE CONTACT: cs@displaydispensary.com














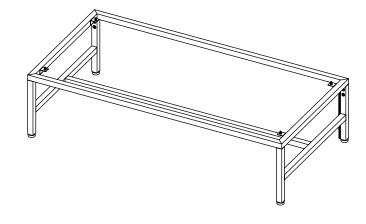






4X

 8X #8-32 X 1" L PAN CROSS HEAD **SCREWS**





1X ALLEN KEY






1X MAGNET


MOUNT THE TOP FRAME TO THE LEGS.



4X 1/4-20 X 0.875" L CSK SOCKET HEAD SCREWS

8X 1/4-20 X 0.875" L CSK SOCKET HEAD SCREWS

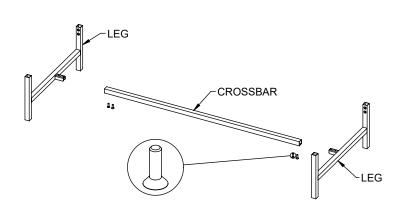


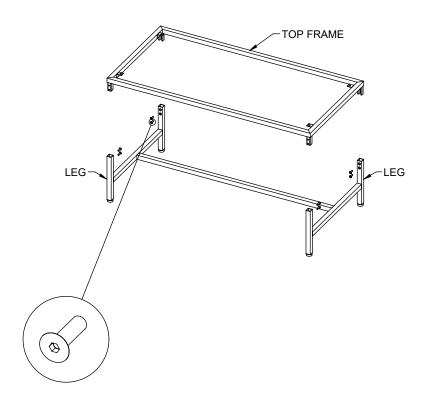



4X


1/4-20 X 0.5" L FLAT HEAD HEXAGON SOCKET SCREWS (TO SECURE TO STORAGE CABINET)

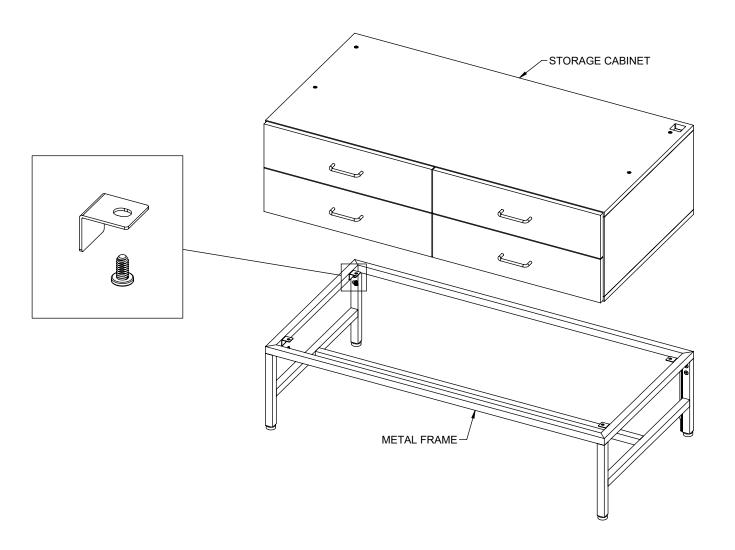

IF DRAWER HANDLES ARE NOT ALREADY INSTALLED, INSTALL THE DRAWER HANDLES.




#8-32 X 1" L PAN CROSS HEAD SCREWS

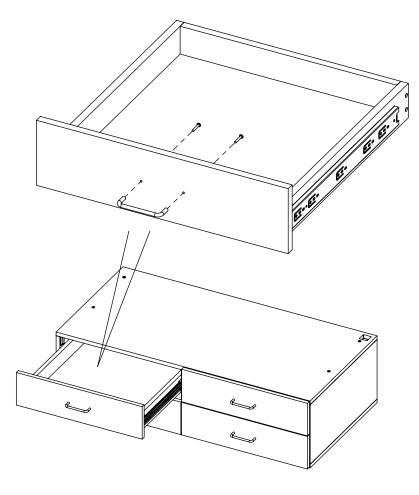


5


USE INCLUDED MAGNET TO OPEN THE MAGNETIC LOCKS. THE MAGNETIC LOCKS ARE LOCATED ON THE CORNERS OF EACH DRAWER.

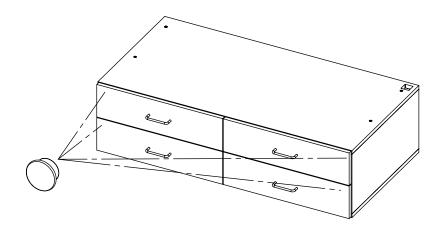

6
IF YOU PREFER KEEP THE DRAWERS
UNLOCKED AT ALL TIMES, PUSH LEVER

DOWN ON THE MAGNETIC LOCK.

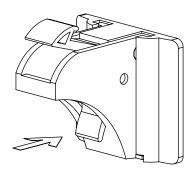

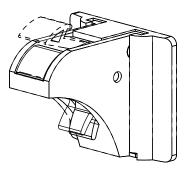


MOUNT BASE FRAME TO WOOD CABINET.

SLIDE THE DRAWER GLIDES TO THE FRONT TO ACCESS L CHANNELS ON THE BASE FRAME.





4X

1/4-20 X 0.5" L FLAT HEAD HEXAGON SOCKET SCREWS

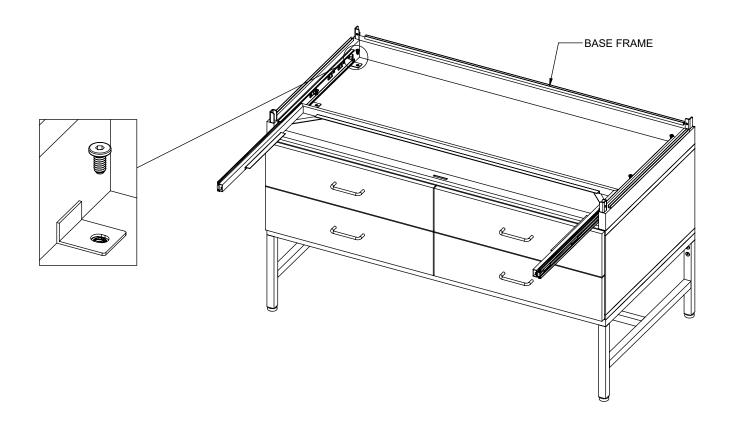

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DDSWCASE-1	BASE FRAME	1
2	DDSWCASE-2	TOP FRAME	1
3	DDSWCASE-2-GLASS	TOP GLASS PANEL	1
4	DDSWCASE-3	FRONT UPRIGHT	2
5	DDSWCASE-4	REAR UPRIGHT	2
6	DDSWCASE-5-GLASS	SIDE GLASS PANEL	2
7	DDSWCASE-6-GLASS	REAR GLASS PANEL	1
8	DDSWCASE-7	FRONT FRAME	1
9	DDSWCASE-7-GLASS	FRONT GLASS PANEL	1
10	DDSWCASE-7-GLASS-TOPCHANNEL	TOP CHANNEL	1
11	ELECTRICAL COVER	ELECTRICAL COVER	2

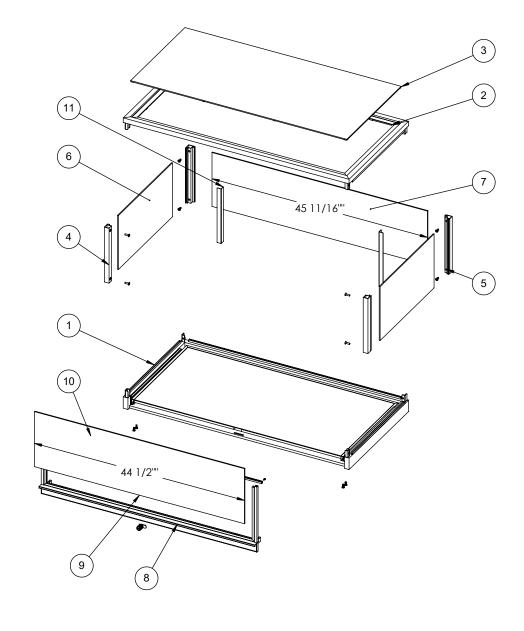

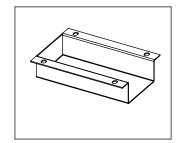

POWER SUPPLY MOUNTING BRACKET

MOUNT FRONT UPRIGHTS TO BASE FRAME.

MOUNT REAR UPRIGHTS TO BASE FRAME.

MAKE SURE REAR UPRIGHTS FACE CORRECT DIRECTION. THE U CHANNELS WILL FACE EACH OTHER. ON THE REAR UPRIGHTS, THE HOLES WILL FACE THE FRONT.




2X

1/4-20 X 0.875" L SOCKET HEAD FLAT HEAD SCREWS (TO SECURE FRONT UPRIGHTS)



2X

1/4-20 X 0.625" L FLAT HEAD HEXAGON SOCKET SCREWS (TO SECURE REAR UPRIGHTS)

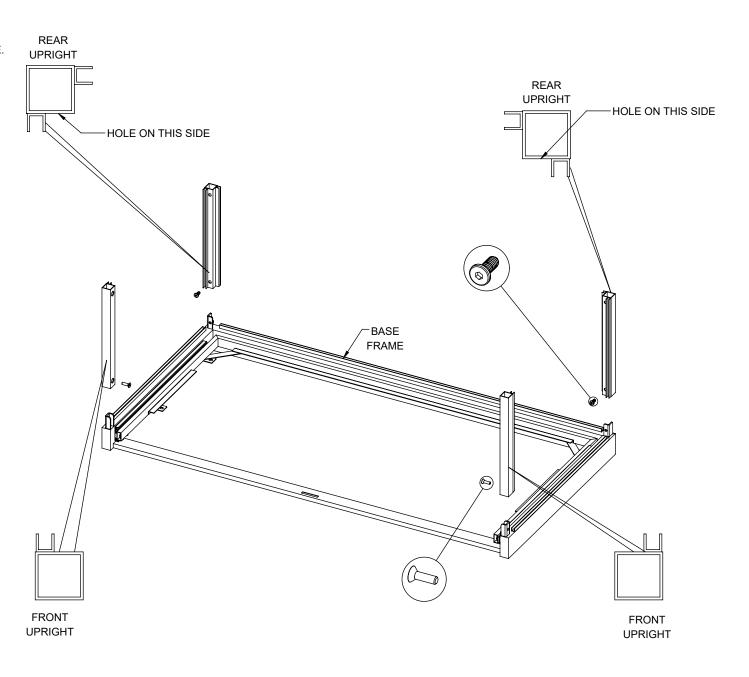


SLIDE DRAWER FRAME ONTO DRAWER GLIDES (ON BASE FRAME).

MOUNT DRAWER FRONT TO DRAWER FRAME.



4X

1/4-20 X 0.625" L FLAT HEAD HEXAGON SOCKET SCREWS (TO SECURE FRONT FRAME)

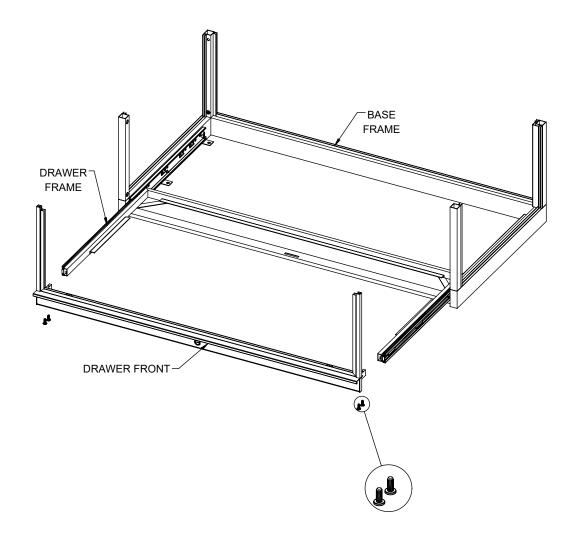


10

SLIDE FRONT GLASS PANEL INTO CHANNELS, AND MOUNT TOP CHANNEL.




2X #8-32 X 0.315" L SOCKET BUTTON HEAD SCREWS

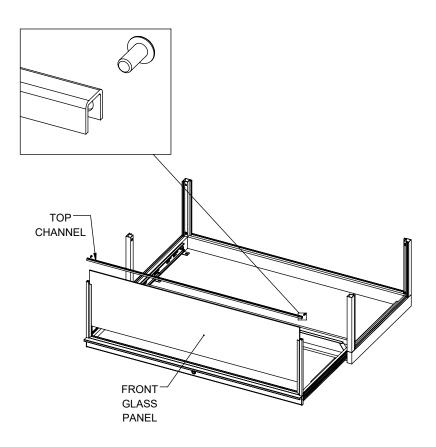

11


PLACE DRAWER PANEL ONTO DRAWER FRAME.

MAKE SURE THE NOTCH IS IN THE FRONT AND FACING TOWARDS THE BOTTOM.

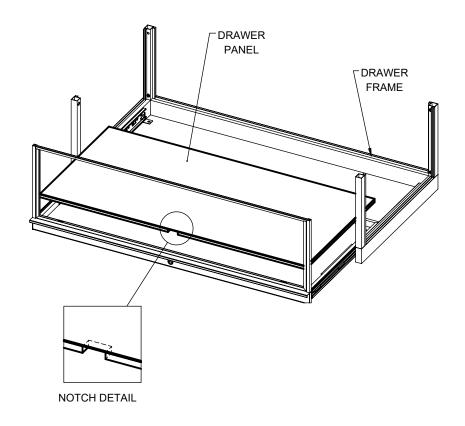

13

MOUNT TOP FRAME ONTO UPRIGHTS.

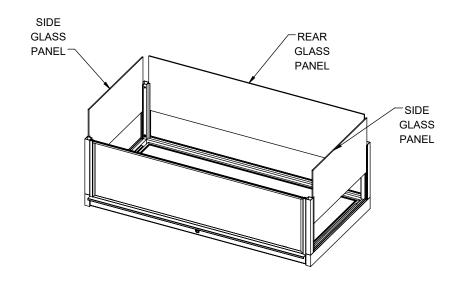




2X 1/4-20 X 0.875" L SOCKET HEAD FLAT HEAD SCREWS (TO SECURE FRONT UPRIGHTS)




2X 1/4-20 X 0.625" L FLAT HEAD HEXAGON SOCKET SCREWS (TO SECURE REAR UPRIGHTS)

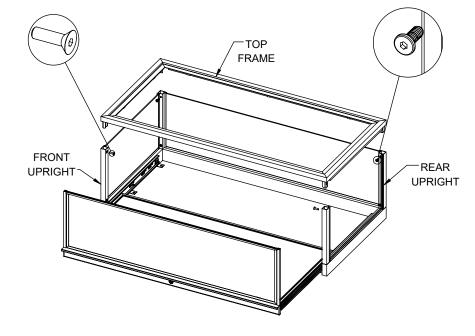

ITEM # DDKIT1B, DDKIT1W, DDKIT1SC SHEET 12 OF 19


PEEL OFF CIRCULAR STICKERS ON TOP GLASS PANEL.

PLACE TOP GLASS PANEL ONTO TOP FRAME.

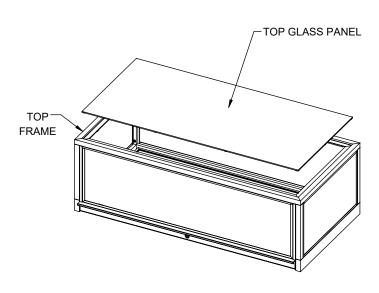


15

ON REAR CORNER, THERE IS A LOOSE LED CABLE. GUIDE IT THROUGH THE HOLE ON TOP OF THE WOOD CABINET UNTIL THE LED CABLE COMES OUT ON THE BOTTOM.

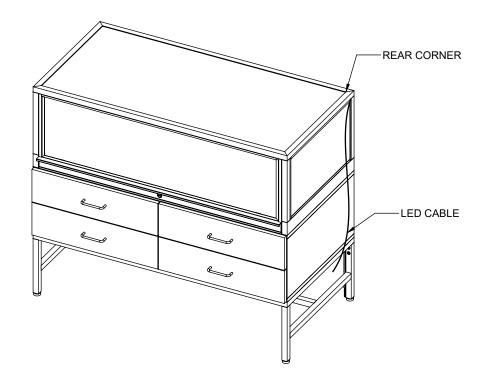


PULL OUT THE DRAWER.

CAREFULLY PLACE ELECTRICAL COVERS
ONTO THE REAR UPRIGHTS. THE MAGNET
WILL SNAP ONTO THE TUBING. IF IT
SNAPS TOO QUICKLY, THE MAGNET MAY
DAMAGE THE FINISH.

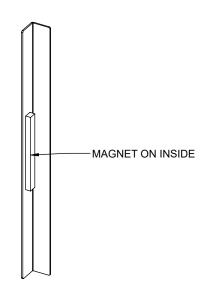

2X ELECTRICAL COVER

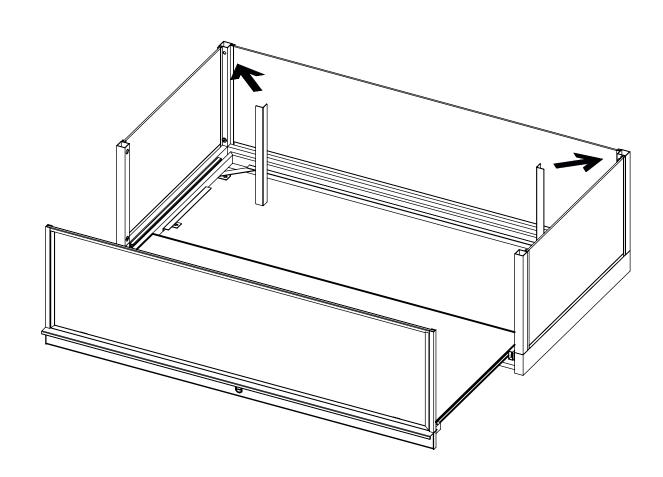



ELECTRICAL INSTALLATION INSTRUCTIONS

INSTALL CABLE RACEWAY ON LEG.

2

IF NOT ALREADY INSTALLED, INSERT THE OUTLET PLUG INTO THE POWER ADAPTER.

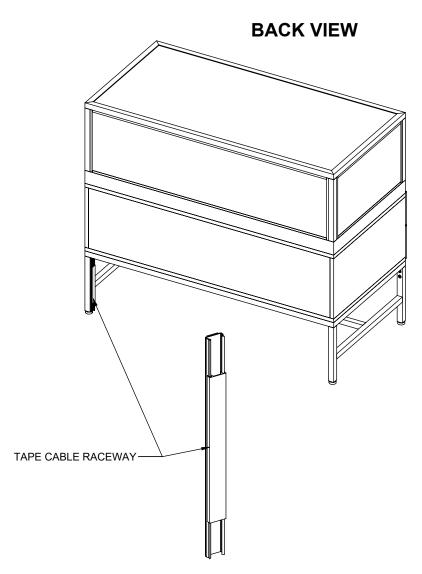

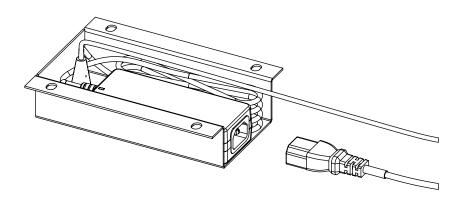


MOUNT BOTTOM MOUNTING BRACKET.


ASSURE THAT THE MOUNTING BRACKET FACES THE CORRECT DIRECTION. THE WIRE SHOULD COME OUT ON THE RIGHT SIDE.



4X

1/4-20 X 0.5" L FLAT HEAD HEXAGON SOCKET SCREWS

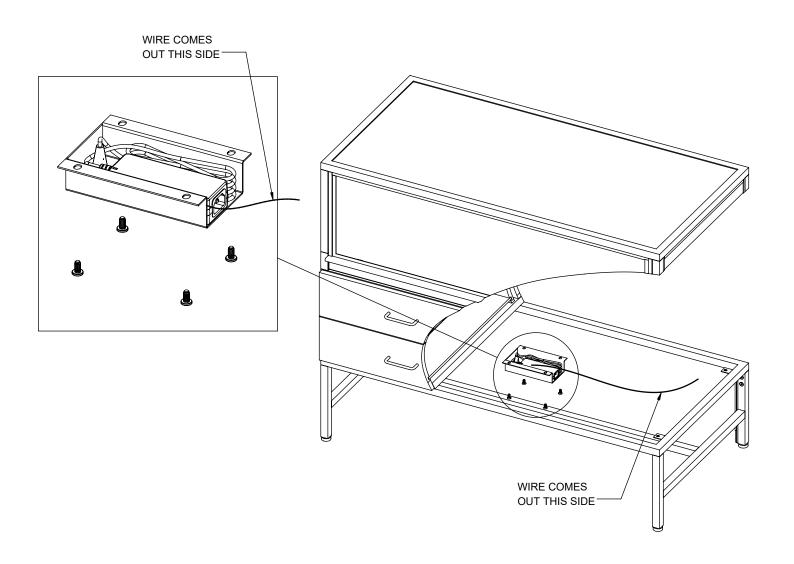

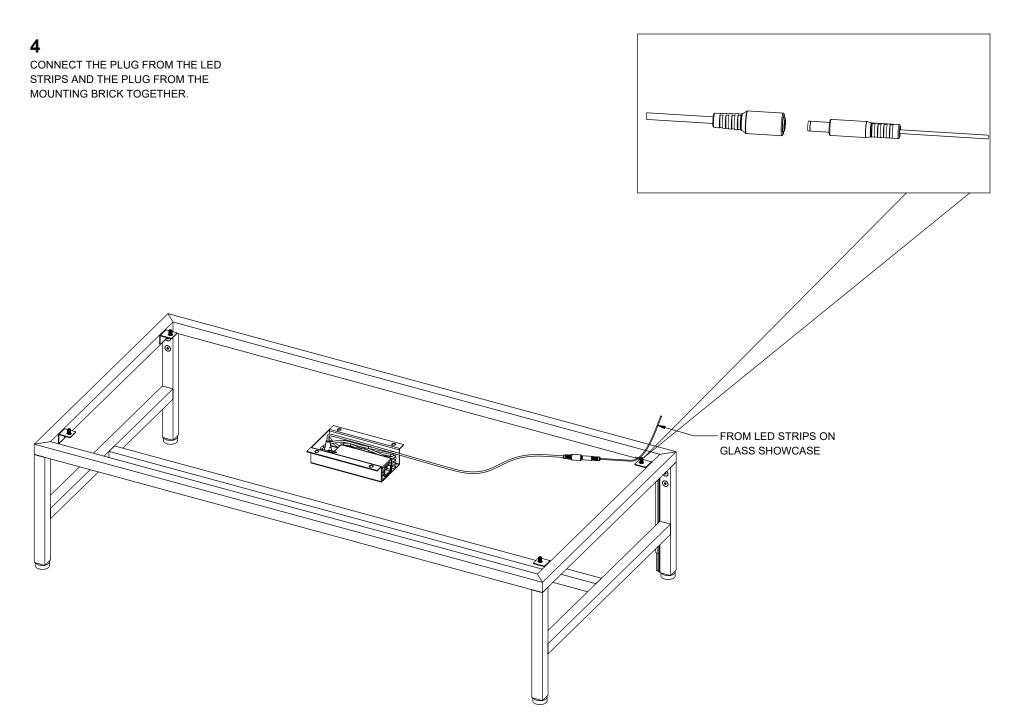


PUT THE POWER PLUG CABLE INTO THE WIRE MANAGEMENT EXTRUSION IN THE LEG.


6

SECURE WIRES FROM UNDERSIDE WITH INCLUDED ZIP-TIES. ZIP TIE LOCATIONS SHOWN FOR REFERENCE ONLY. INSTALLER TO DETERMINE BEST PLACEMENT.

7

 TOGGLE THE SWITCH ON THE MOUNTING BRACKET TO TURN ON THE LIGHTS ON THE GLASS SHOWCASE.



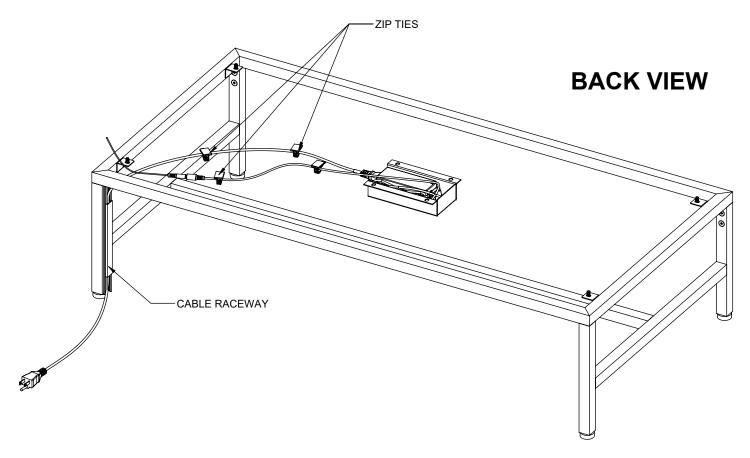

TROUBLE SHOOTING INSTRUCTIONS

1

CHECK CONNECTION BETWEEN LED LIGHTS AND MOUNTING BRACKET (CONNECTION FROM <u>STEP 1</u>.)

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.


2

CHECK CONNECTION BETWEEN MOUNTING BRICK AND POWER CORD (CONNECTION FROM <u>STEP 2</u>.)

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.

3

UNMOUNT MOUNTING BRACKET.
CUT ZIP TIE HOLDING BUNDLE OF WIRES TOGETHER.

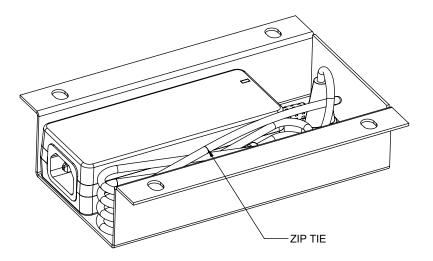

4

UNPLUG AND RECONNECT THE POWER ADAPTER TO THE SWITCH.

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, PLEASE CONTACT CUSTOMER SERVICE AT cs@displaydispensary.com FOR REPLACEMENT PARTS.

